


— TRIM TABS OFF OF TOP OF HOUSING

— USE EXISTING SCREWS TO MOUNT

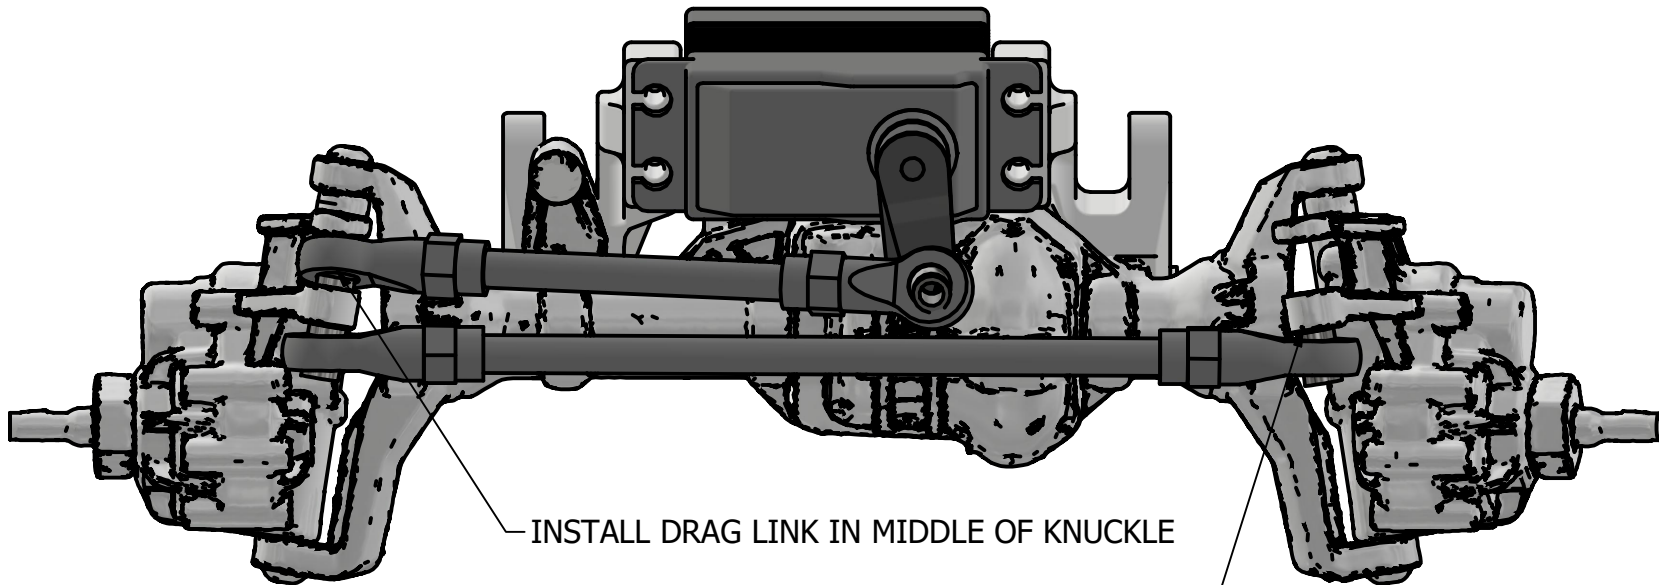

— INSTALL DRAG LINK IN MIDDLE OF KNUCKLE

— INSTALL TIE ROD ON BOTTOM OF KNUCKLE